




Remote Adapter Installation Instructions

Use of this adapter will add 2.8 inches of distance from the engine filter housing opening + the length of your chosen -10AN fittings. Please consider these dimensions and associated clearances before installation.



- Remove cartridge filter cap assembly.
- Clean exposed surfaces from dirt and debris.
- Remove or clear stock retaining clip (If present)
- Apply a small amount of oil to adapter O-rings.

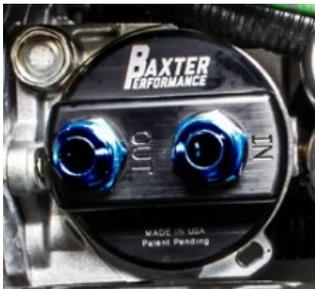

- Push in and turn adapter clockwise into filter housing until threads are fully engaged.
- Continue screwing into place until fully seated.
- If using side porting, adapter can be backed out up to 340° to achieve proper alignment. (Adapter will remain sealed.)



- Make appropriate connections to supplied -10AN fittings.
- You are now ready to route supply and return hoses to an aftermarket remote oil filter, cooler, etc.

DO NOT ATTEMPT TO REMOVE DOCKING COLLAR FROM ADAPTER BODY AS INTERNAL SEAL DAMAGE MAY RESULT